

How to Read

It is important to become familiar with the information available from the meter. To identify this information the following icons and displays are helpful.

Table 2 Icons and Displays



Light Sensor, recessed under the small hole near the center of the faceplate of the E-Coder)R900i, supplies the power for the LCD panel (light activated).



Flow/Leak Indicator shows the direction of flow through the meter:

- ON** Water in use
- OFF** Water not in use.
- Flashing** Water is running slowly/low flow indication.



Leak indicator displays a possible leak:

- OFF** No leak indicated.
- Flashing** Intermittent leak indicated. Water used during at least 1/2 of the 15-minute intervals in the last 24 hours (96 15-minute intervals in a 24-hour period).
- Continuous ON** Continuous leak indicated. Water used during all 15-minute intervals in the last 24 hours.



Nine-digit LCD displays the meter reading in billing units of measure.

- Last three digits Testing units used for meter testing.
- Fifth and sixth reading digits Reading units.
- First four digits Typical billing digits.